

Kia SELTOS

SUV, 5 doors
From 2026





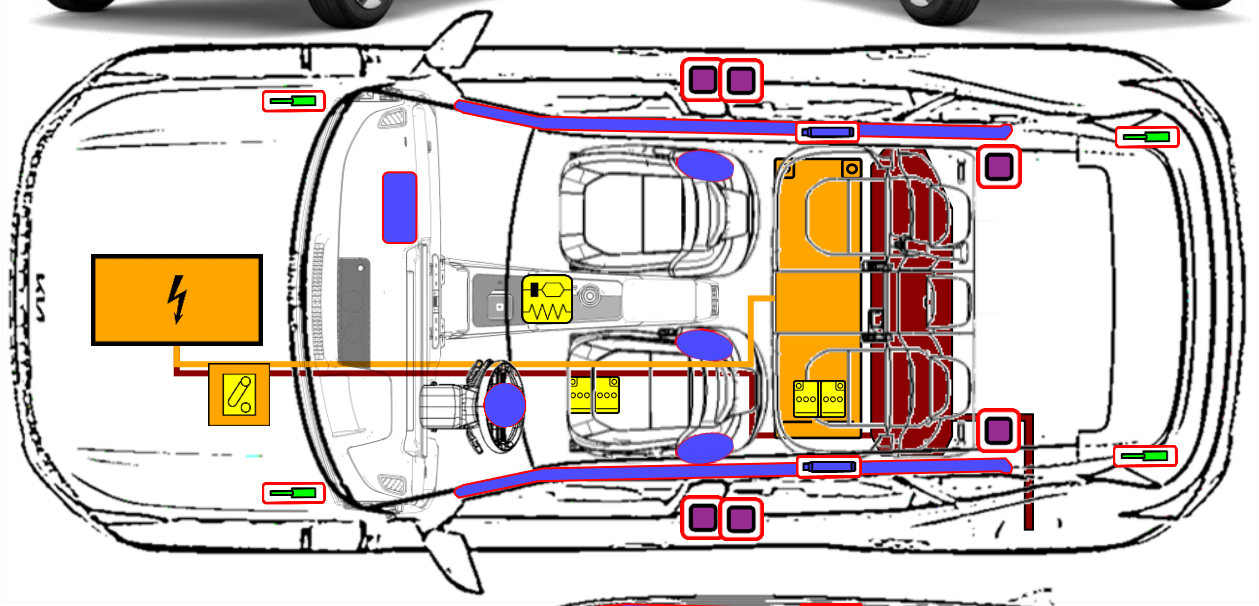

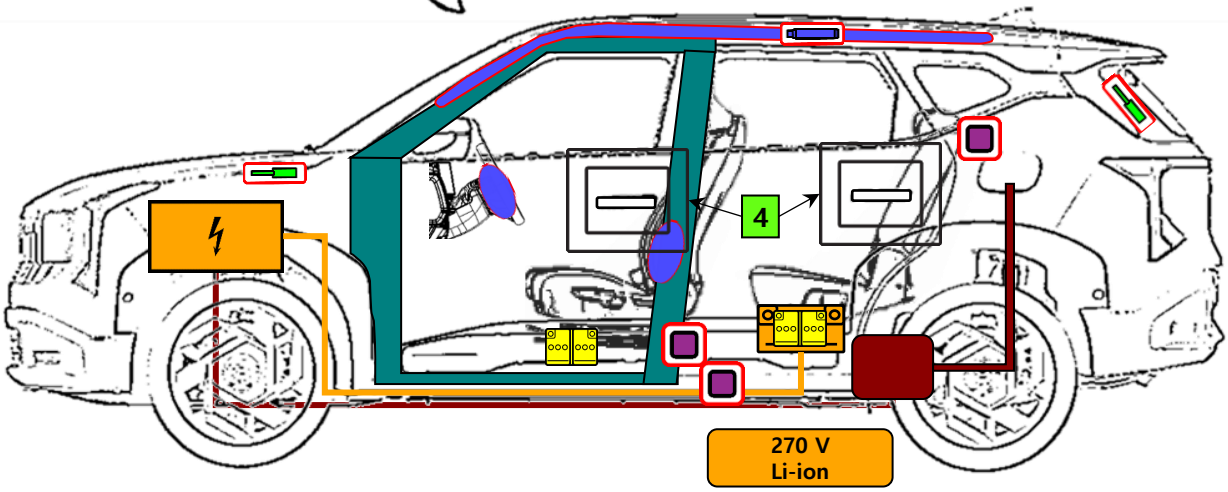

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery, low-voltage		Gas strut / preloaded spring		High-strength zone		Zone requiring special attention
	Battery pack, high-voltage		High-voltage power cable		High-voltage component		Low-voltage device that disconnects high voltage
	Fuel tank content petrol/ethanol						


1. Identification / Recognition



2. Immobilisation / Stabilisation / Lifting

Immobilisation:

Pull the **EPB** switch to set the parking brake.

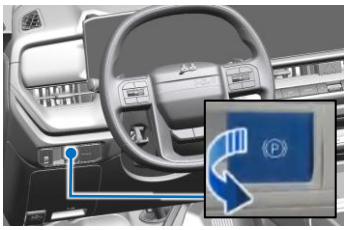


For automatic vehicles, shift into Park (P).



Lifting areas underneath the vehicle:

▲	Lifting area
	Non-lifting area
	Fuel tank

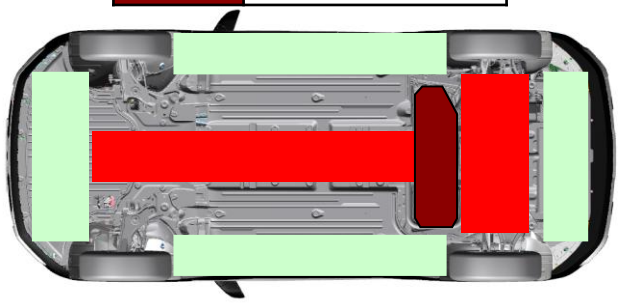



3. Disable Direct Hazards / Safety Regulations


⚠ IN CASE OF AN ACCIDENT WHERE AIRBAGS AND SEAT BELT PRETENSIONERS WERE ACTIVATED, THE HV SYSTEM SWITCHES OFF AUTOMATICALLY. FOR ALL OTHER CASES, FOLLOW THE DISABLING METHODS BELOW:

Deactivate



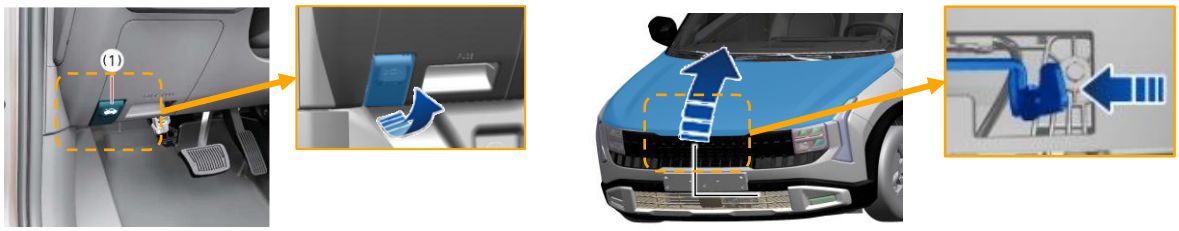

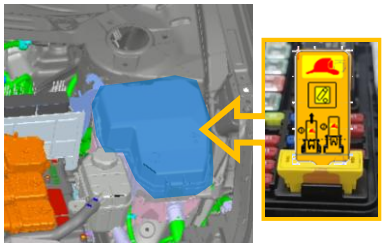


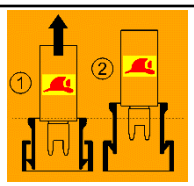


① HV battery connected
② HV battery disconnected

⚠ The service interlock is not completely removable.


Deactivate



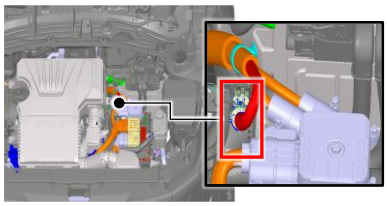


Deactivate

4. Access to the Occupants

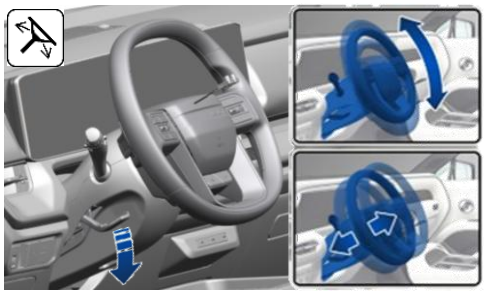


Glass type			
①	Laminated	③	Tempered
②	Tempered	④	Tempered
	OPT: laminated		


Open from inside:

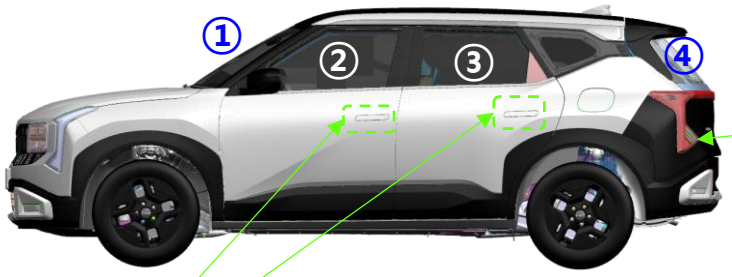




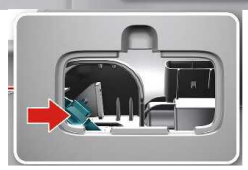


Door handles:

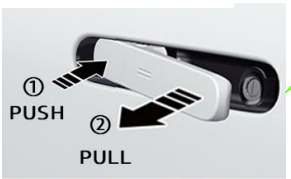

Vehicle body:
High-strength steel

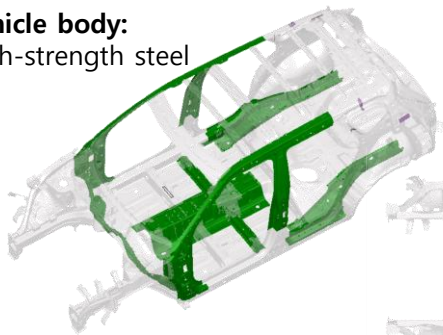

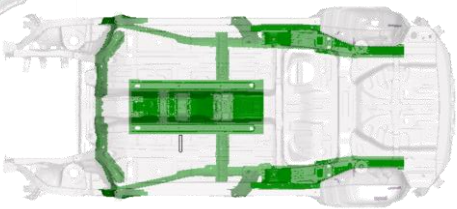


5. Stored Energy / Liquids / Gases / Solids


Li-ion 227 V	12 V	35 l

WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE AND THERE IS A RISK OF THERMAL RUNAWAY. CHECK THE BATTERY PACK TEMPERATURE USING A THERMAL IMAGING CAMERA.

IR


6. In Case of Fire

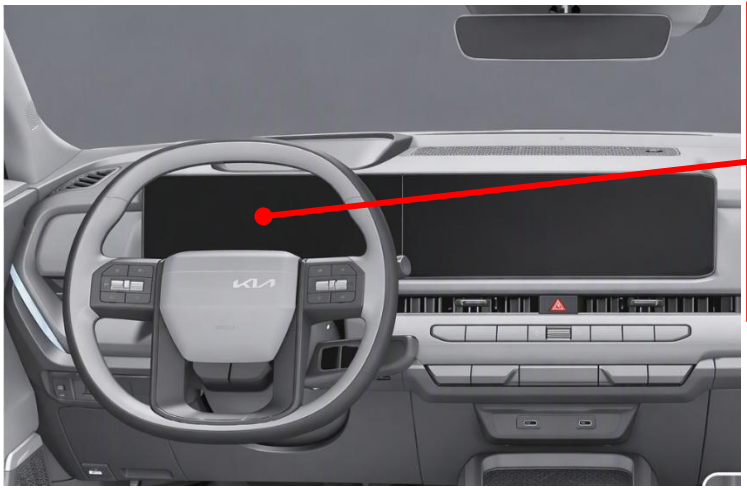

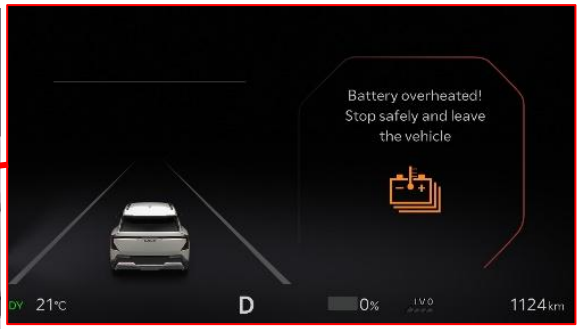


8. Towing / Transportation / Storage

OK

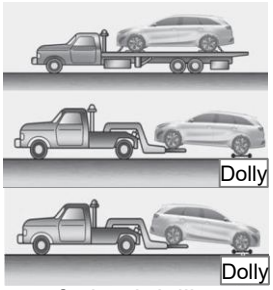


Note: The use of wheel dollies or a flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

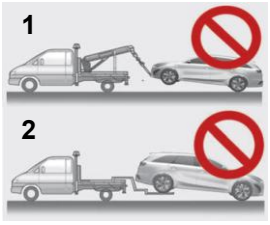

Note: Do not tow using sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Towing hook

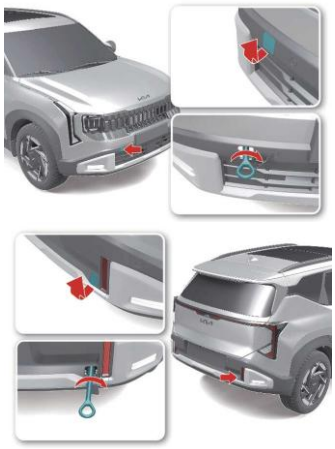

The hook located in the tool case in the boot must only be used for temporary towing.

10. Explanation of Pictograms Used

	General warning sign		Steering wheel, tilt control		Lifting point; central support
	Bonnet		Use thermal infrared camera		Boot